


INSTRUCTION MANUAL

Model - 9000 Music Mixer

SPECIFICATION

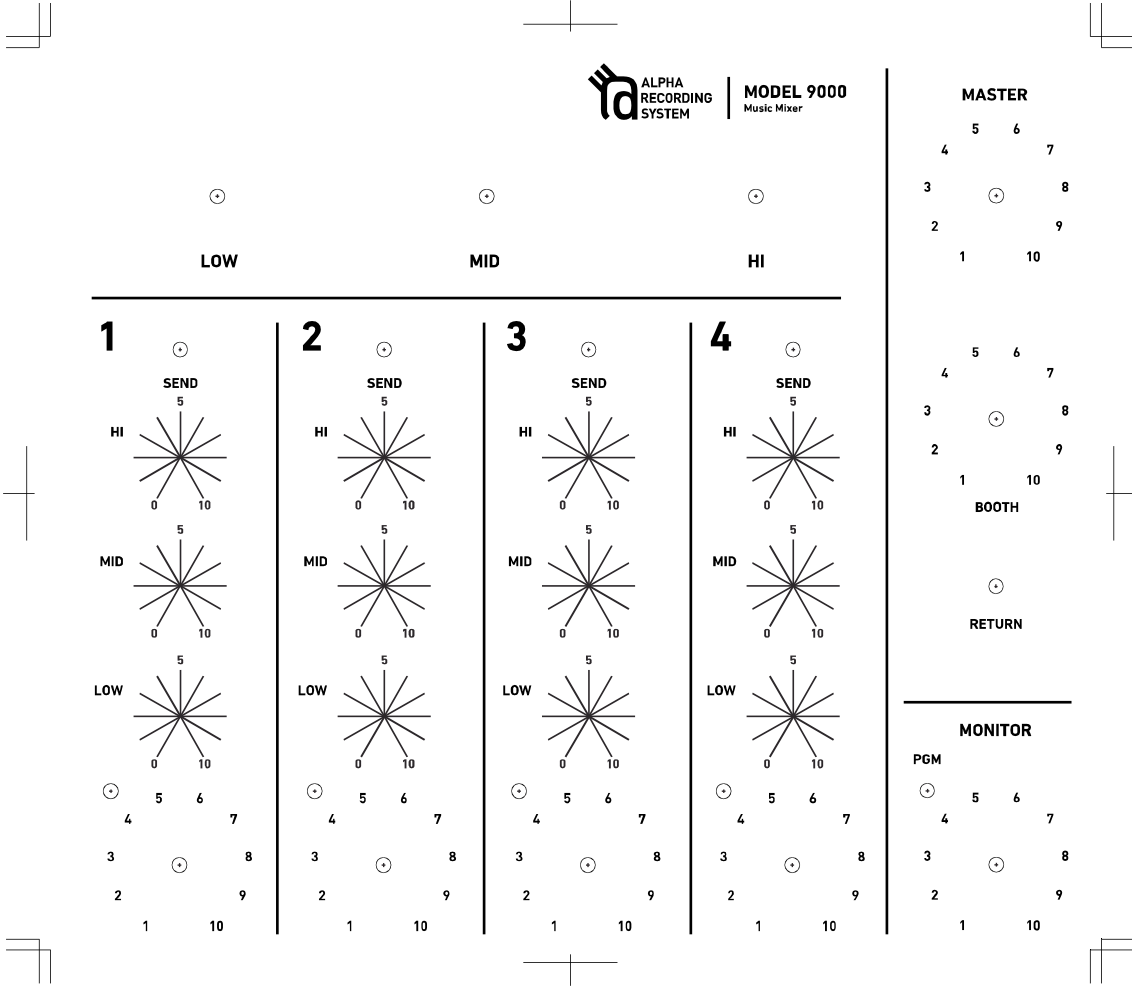

Input 3 x Phono: 47K Ohm 5 x Line: 20K Ohm EFFECT LOOP 1: 20K Ohm EFFECT SEND 2: 20K Ohm
Output HOUSE: RCA Unbalanced Impedance 600 Ohm / XLR Balanced Impedance 50 Ohm

BOOTH: RCA Unbalanced Impedance 600 Ohm / XLR Balanced Impedance 50 Ohm TAPE: RCA Unbalanced Impedance 600 Ohm EFFECT LOOP 1: RCA Unbalanced Impedance 600 Ohm EFFECT RETURN: RCA Unbalanced Impedance 600 Ohm
Frequency response: +-1db 20hz-20Khz
Power requirements: (3 types) USA-115VAC, EU-230VAC, Japan-100VAC 50/60hz Dimensions (W)280 x (H)240 x (D)90 mm Power Consumption: 20W
Front panel color: Black

Turning on the power


Due to the Model-9000 is designed for a professional use, there is no power switch to avoid accidentally power off while playing.

To turn on the mixer, simply connect the power cord to the external power box then connect the plug to a standard wall outlet. To turn off, just disconnect the power plug.

Caution / Warning

The external power box will have a heat when the power is on. For safety, unplug the power chord when it is not used for a long period of time.

Precautions

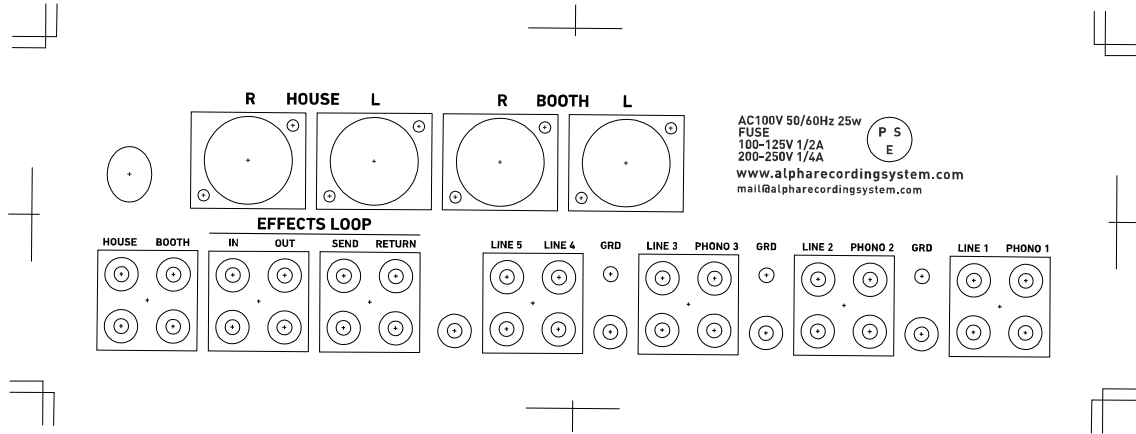

Connect the effect loopcables here.

If no external devices such as isolators, equalizers or effectors are used through EFFECT LOOP IN OUT connectors then the effect loop cables equipped with the mixer must be inserted as illustrated below. Otherwise there will be no audio output.

